















QUICK START GUIDE

ELECTRONIC STARTING SYSTEM

Lynx System Developers, Inc.

Please verify that your Electronic Starting System contains the components pictured below.
If not, or if you need additional support, please contact us at: **USA (978) 556-9780**

ELECTRONIC STARTING SYSTEM COMPONENTS			
ELECTRONIC STARTING GUN		PRIMARY 12 VOLT BATTERY PACK	
PRIMARY MEGAPHONE SPEAKER W/ CABLE		HEADSET MICROPHONE	
PRIMARY AUXILIARY MICROPHONE		PRIMARY TRIPOD	
COMPONENTS FOR SECOND SPEAKER ADD-ON			
SECONDARY MICROPHONE SPEAKER		SECONDARY 12 VOLT BATTERY PACK	
WIRE SPLITTER		LONG AUXILIARY CORD	
SECONDARY AUXILIARY MICROPHONE		SECONDARY TRIPOD	



Quick Start Guide


Electronic Starting System

PART A: SINGLE SPEAKER SETUP

NOTE: Make sure to insert batteries into the Electronic Gun before setup.

1. Attach the Megaphone Speaker to the tripod.
2. Insert the short, attached **Connect to Speaker** auxiliary cable into the **AUX port** on the back of the speaker.
 - If setting up **dual speakers**, insert the **Wire Splitter** into the **AUX port** then insert the **Connect to Speaker** cable into one of the Wire Splitter ends.
3. Insert the cable labeled **Connect to Electronic Gun** into the bottom of the Electronic Gun and tighten the screw. **NOTE: Pins are fragile, be sure connectors are aligned before inserting.**
4. **BATTERY PACK:** Cable connects into the **DC Input port** on the back of the Megaphone Speaker. Hang the battery pack on the tripod.
 - Make sure to insert the power adapter (**DC Input cable** - resembles a cigarette lighter) *completely* into the battery pack (you should see a **red light** when it's inserted all the way).
5. **HEADSET MICROPHONE:** Cable labeled **Connect to Electronic Gun** connects into the speaker jack on the bottom of the Electronic Gun.
6. **START SIGNAL OUTPUT:** **Wireless (RadioLynx):** remove the impact sensor from your RadioLynx transmitter and plug the RadioLynx into the Start Signal Output. **Wired:** Connect the *male* end of the Start Cable into the Connection Box and the *female* end into the Start Signal Output on the Megaphone Speaker.
7. **OPTIONAL AUXILIARY MICROPHONE:** Insert the cable into the **MIC port** on the back of the Megaphone Speaker and tighten the screw.
8. Test the Electronic Gun to make sure all connections are correct. Set the dial to 1 for a beep sound and 2 for a gunshot sound.

MEGAPHONE SPEAKER CONNECTIONS

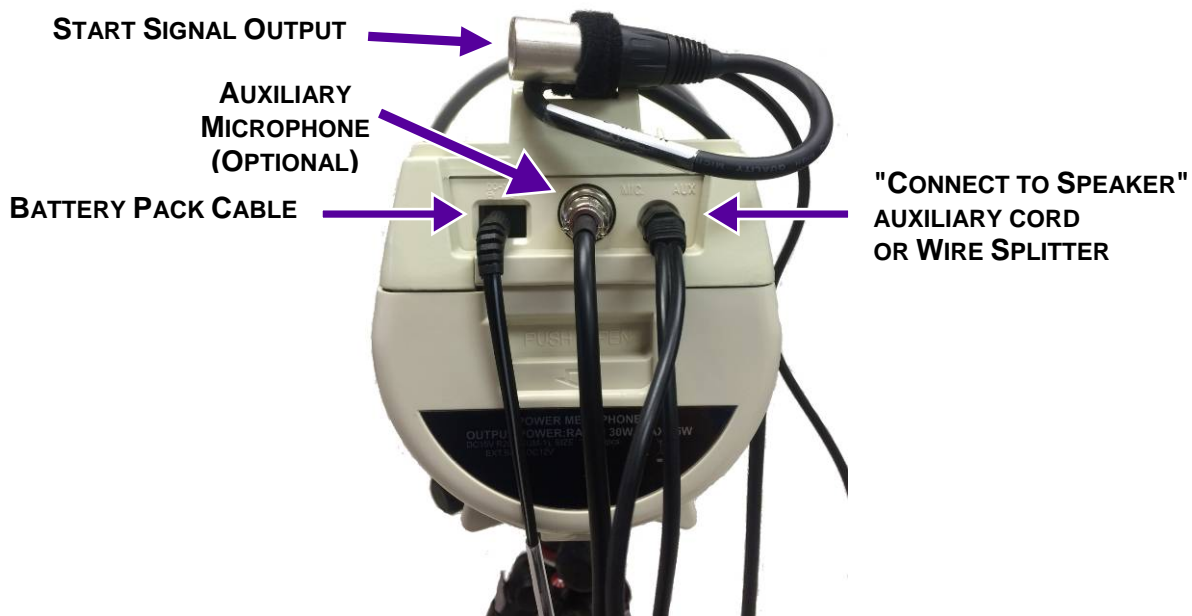

PART B: SECOND SPEAKER ADD-ON

1. Attach the secondary Megaphone Speaker to the secondary Tripod.
2. **BATTERY PACK:** Connect to the secondary Megaphone Speaker as described above.
3. **WIRE SPLITTER:** Insert into the *primary* Megaphone Speaker's **AUX port**.
4. Insert the attached auxiliary cord labeled **Connect to Speaker** from the *primary* Megaphone Speaker into one end of the **Wire Splitter**.
5. **LONG AUXILIARY CORD:** Insert one end into the **Wire Splitter** and the other end into the **AUX port** of the *secondary* Megaphone Speaker.