



# Lynx 360 Display

## Quick Start Guide

### Items Not Included

---

Computer running FinishLynx (requires NCP plug-in) or FieldLynx (requires Scoreboard plug-in) on Microsoft Windows. ResultTV is also required.

### Introduction

---

The following guide will walk you through the setup, configuration, and operations of the display. If at any point you need additional help, please contact Technical Support: [support@finishlynx.com](mailto:support@finishlynx.com).

### Setup

---

Follow the steps defined in the following documents available on the USB drive provided with your order or online:

1. [Lynx 360 Display – Basic Setup Video](#)
2. [360 LED Display Electrical QSG](#) (see Download section)

### ResultTV

---

1. Go to **File | Options... | General tab**:
  - a. Profile:
    - **Video-360 (single)** for the 1-tier build
    - **Video-360 (double)** for the 2-tier build
  - b. Click **Ok**.
  - c. Exit and restart ResultTV.

### FieldLynx

---

1. Click the **Options** gear button.
2. Click **New** to create a new scoreboard object or select an existing scoreboard object to edit it.
3. **Result Scripts**
  - o Metric: ResultTV\_Video\_results-360.lss
  - o English: ResultTV\_Video\_results-360.lss
  - o Standings: ResultTV\_Video\_standings-360.lss
4. Serial: **network (connect)**
  - o Port number: **1024**
  - o IP Address: (IP address of the ResultTV PC)
5. After entering these settings, restart the software to confirm that the scoreboard script is running.

### FinishLynx

---

1. Go to **Scoreboard | Options...**
2. Click **New**.
3. Serial Port: **Network(connect)**
  - a. Port: **1024**
  - b. IP address: address of the ResultTV PC.
4. Script: **ResultTV\_Video\_1line-360.lss**
5. Running Time: **Normal**
6. Results: **Auto**
7. Click **Ok** and restart FinishLynx.